



JVC

COLOUR TELEVISION

COLOUR TELEVISION

AV28CT1EK
(UK model)

AV28CT1EI
(Ireland model)

AV28CT1EK / AV28CT1EI

Contents

Safety precautions	2
Setting up your TV	4
T-V LINK functions	7
Using your TV—the basics	8
Remote control buttons and functions	11
Using the TV's menus	16
Picture setting	17
Picture features	18
Sound setting	20
EXT SETTING	21
FEATURES	23
INSTALL	25
DEMO	29
Other menus	30
Further preparation	31
TV buttons and parts	33
Troubleshooting	34
Specifications	35

Natural Vision
T-V LINK



INSTRUCTIONS

JVC
VICTOR COMPANY OF JAPAN, LIMITED

Thank you for buying this **JVC** colour television.

To make sure you fully understand how to use your new TV, please read this manual thoroughly before you begin.

Safety precautions


■ Warning

To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

■ Caution

To ensure personal safety, observe the following rules regarding the use of this unit.

- 1 Operate only from the power source specified (AC 220 – 240 V, 50 Hz) on the unit.
- 2 Avoid damaging the mains plug and power cord.
- 3 Avoid improper installation and never position the unit where good ventilation is unattainable. When installing this television, distance recommendations must be maintained between the floor and wall, as well as installation in a tightly enclosed area or piece of furniture.
Please adhere to the minimum distance guidelines shown for safe operation.

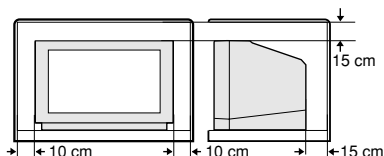

- 4 Do not allow objects or liquid into the cabinet openings.
- 5 In the event of a fault, unplug the TV and call a service technician. Do not attempt to repair it yourself or remove the rear cover.
- 6 The surface of the TV screen is easily damaged. Be very careful with it when handling the TV.
Should the TV screen become soiled, wipe it with a soft dry cloth. Never rub it forcefully. Never use any cleaner or detergent on it.
- 7 The main power button on the TV does not fully isolate the TV from the mains supply. If you are not going to use this TV for a long period of time, be sure to disconnect the mains plug from the mains outlet.
- 8 Do not place any naked flame sources, such as lighted candles, on the apparatus.

■ Warning

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or adaptor or consult your dealer.

If nonetheless the mains plug is cut off, remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If a new mains plug has to be fitted, then follow the instruction given below:

Important

Do not make any connection to the larger terminal which is marked with the letter E or by the safety earth symbol \perp or coloured green or green-and-yellow.

The wires in the mains lead on this product are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As these colours may not correspond with the coloured marking identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.


The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

When replacing the fuse only a correctly rated approved type should be used and be sure to re-fit the fuse cover.

If in doubt — consult a competent electrician.

How to replace the fuse

Open the fuse compartment with a blade screwdriver, and replace the fuse.

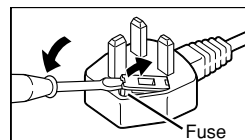

■ Guidelines for safe operation

This equipment has been designed and manufactured to comply with international safety standards. However, as with any electrical appliance, care must be taken to ensure optimal results and operational safety.

- Before attempting to use this equipment, read the operating instructions thoroughly.
- Ensure that all electrical connections (including the mains plug, extension leads, etc.) have been made in accordance with the manufacturer's instructions.
- If ever in doubt about the installation, operation or safety of this equipment, consult your dealer.
- Handle all glass panels or covers with care.
- Never operate this equipment if it appears damaged or operates abnormally. Turn the power off, disconnect the main power plug and consult your dealer.
- Never remove any affixed panels or covers. Doing so may result in electrical shock.
- Never leave this equipment operating unattended unless otherwise specifically stated that it is designed to do so or in standby mode. Only use the designated power switch to turn off the power and ensure that all potential users are instructed how to do so. Make special arrangements for infirm or handicapped persons.
- Never watch TV while operating a motor vehicle. It is illegal to watch TV while driving.
- Never listen to headphones at high volume. Doing so may damage your hearing.
- Never obstruct the ventilation of this equipment. Doing so may cause overheating and result in a malfunction or damage.
- Never use makeshift stands or attempt to affix legs with wood screws. When using a manufacturer's approved stand or legs, use only the fixtures provided and follow the installation instructions.
- Never allow this equipment to be exposed to rain or moisture.
- Never allow anyone, especially children, to insert anything into an opening in the case. Doing so may result in a fatal electrical shock.
- Never guess or take chances with electrical equipment of any kind. It is better to be safe than sorry.

Setting up your TV

■ Connecting the aerial and video cassette recorder (VCR)


If you are connecting a VCR, follow

① → ② → ③ in the diagram opposite.

If you are not connecting a VCR, follow ①.

- For more details, see the manuals that came with the equipment you want to connect.
- The connecting cables are not provided.
- You can watch a video using the VCR without doing ③. For details, see your VCR instruction manual.
- To connect more equipment, please see "Further preparation" on page 31.
- If you connect a decoder to a T-V LINK compatible VCR, set the DECODER (EXT-2) function to ON. For details, see "Using the DECODER (EXT-2) function" on page 30. Otherwise, you will not be able to watch scrambled channels.


To use the T-V LINK functions, you must have a T-V LINK compatible VCR connected by a SCART cable ③ to the EXT-2 terminal on the TV. For details about T-V LINK functions, see "T-V LINK functions" on page 7.

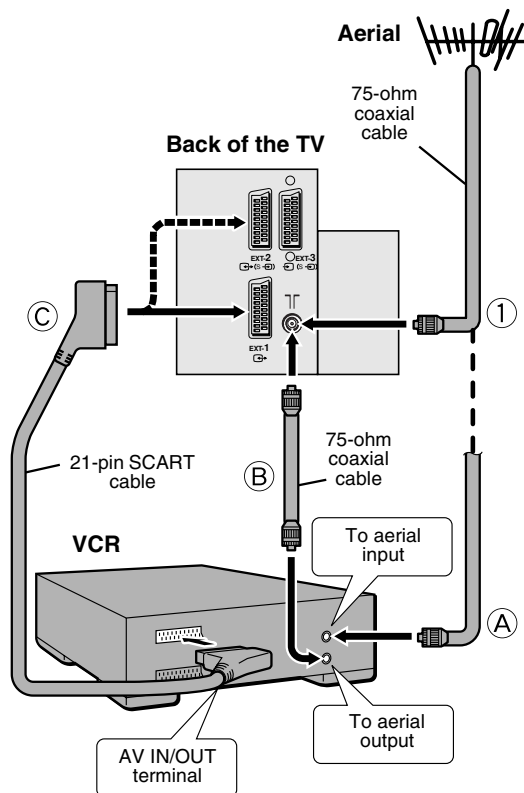

■ Connecting the power cord to the mains outlet

Caution:

- Use only the power source specified on the unit (AC 220 – 240 V, 50 Hz).

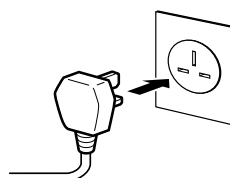


■ Putting batteries into the remote control

Use two AAA/R03 dry cell batteries.

Insert the batteries holding the ⊖ end, making sure the ⊕ and ⊖ terminals are correctly lined up.

To open the battery compartment, slide the door downwards and lift off. Replace the door by sliding it upwards until it fastens into place.

- Follow the warnings printed on the batteries.
- Battery life is about six months to one year, depending on how much you use the remote control.
- If the remote control does not work properly, fit new batteries.
- The batteries we supply are only for setting up and testing your TV. Please replace them as soon as you need to.
- Always use good-quality batteries.

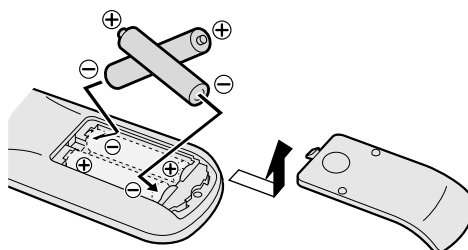


■ Initial settings

When the TV is first turned on, it goes into the initial setting mode, and you will see the JVC logo. Follow the instructions on the screen to make the initial settings.

1 Press the main power button on the TV


The power lamp lights red (for power on), then green (for TV on) and the JVC logo appears.

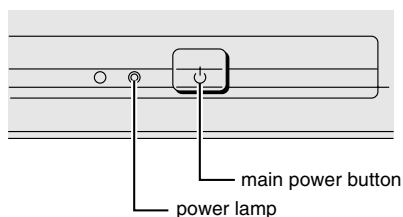

- If the power lamp stays red and does not change to green:
your TV is in the standby mode. Press the (standby) button on the remote control to turn your TV on.
- If the JVC logo does not appear this is because your TV has already been turned on for the first time:
use the "LANGUAGE" and "AUTO PROGRAM" functions to make the initial settings. For details, see "INSTALL" on page 25.

2 Press the OK button

The LANGUAGE menu appears.

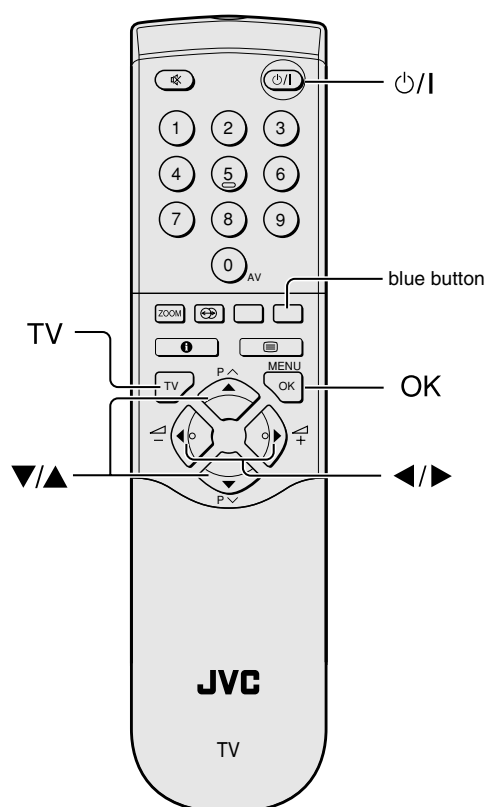


3 Press the and buttons to choose ENGLISH

The on-screen display will then be in English.

4 Press the **OK** button to start the **AUTO PROGRAM** function

The **AUTO PROGRAM** menu appears and the TV channels you receive are automatically stored in the programme numbers list (PR).

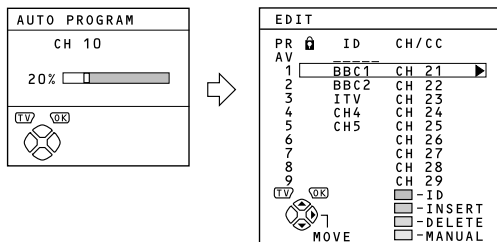

To cancel the AUTO PROGRAM function:


Press the **TV** button.

5 After the TV channels have been registered in the programme numbers list (PR), the **EDIT** menu appears

If you want to, you can now edit the programme numbers (PR) using the **EDIT/MANUAL** function. For details, see "EDIT/MANUAL" on page 26.

If you do not want to edit programme numbers (PR), go to the next step.

6 Press the **OK** button to display the **T-V LINK** menu

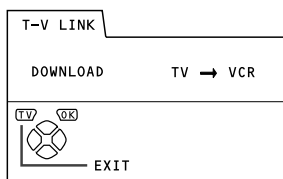

7 Follow the **T-V LINK** menu according to the type of VCR you have connected to the **EXT-2** terminal

If you do not have a T-V LINK compatible VCR connected:

Press the **TV** button to leave the T-V LINK menu.

The **T-V LINK** menu disappears.

If you have a T-V LINK compatible VCR connected:

Follow the operating procedure "Downloading data to a VCR" on page 30 to transmit the programme number (PR) data.

8 Now, the initial settings are complete, and you can watch the TV

Note:

- **For UK model (AV28CT1EK):**

BBC1, BBC2, ITV, Channel 4 and Channel 5 are automatically set to the programme numbers PR1 to PR5.

If the TV doesn't receive one of these TV channels, that programme number (PR) will not be set. Programme number PR6 is not normally set.

- **For Ireland model (AV28CT1EI):**

If your TV can detect the TV channel name from the TV channel broadcast signal, the TV channel name is assigned to the programme number (PR) to which the TV channel has been set.

However, which TV channels are set to which programme numbers (PR) will depend on the area in which you live.

- If a TV channel you want to view is not set to a programme number (PR), you can set it using the **MANUAL** function. For details, see "EDIT/MANUAL" on page 26.
- The **AUTO PROGRAM** function does not set the programme number PR 0 (AV) for your video cassette recorder. You will need to set this using the **MANUAL** function.
- In some areas you may get TV reception from more than one transmitter, for example different ITV regions. In this case each TV channel could be set twice. If this happens, the first set of channels will have the stronger signal. If you want to delete the second set of channels, you will have to do it manually (see page 28).

For users in the UK:

If you have any problems setting up your new TV, please call the **JVC** Helpline on **0870 330 5000**.

For users in the Republic of Ireland:

If you have any problems setting up your new TV, please contact your local **JVC** dealer.

T-V LINK functions

When you have a T-V LINK compatible VCR connected to the EXT-2 Terminal on the TV, it is easier to set up the VCR and to view videos. T-V LINK uses the following features:

■ Pre-set download

The VCR will automatically download the registered data on the TV channels from the TV. This means you do not need to set up the program channels on your VCR manually. The preset download function automatically begins when the initial setting is complete or whenever you carry out the AUTO PROGRAM or EDIT/MANUAL functions.

You can also carry out this function using your VCR controls.

When "FEATURE NOT AVAILABLE" is displayed:

If "FEATURE NOT AVAILABLE" is displayed, the download was not performed correctly. Before trying to download again, check that:

- the VCR power is turned on
- the VCR is T-V LINK compatible
- the VCR is connected to the EXT-2 terminal
- the SCART cable is fully wired

■ Direct Rec

"What You See Is What You Record"

You can easily record to VCR the images that you are watching on the TV.

For details, read the manual for your VCR.

Use your VCR controls. "VCR IS RECORDING" is displayed.

In the following situations, the VCR will stop recording if the TV is turned off, if the TV channel or input is changed, or if the menu is displayed on the TV:

- when recording images from an external device connected to the TV (for example a camcorder)
- when recording a TV channel after it has been unscrambled on a decoder
- when recording a TV channel by using the TV's output because the VCR's own tuner cannot properly receive that channel
- You cannot carry out Direct Rec using your TV's control.
- Generally, the VCR cannot record a TV channel that it cannot receive properly on its own tuner, even if you can view that TV channel on the TV. However, some VCRs can record a TV channel by using the TV's output if that channel can be viewed on the TV. For details, see your VCR instruction manual.

■ TV auto power on/VCR image view

When the VCR starts playing, the TV automatically turns on and the images from the EXT-2 terminal appear on the screen.

When the VCR menu is operated, the TV automatically turns on and the images from the EXT-2 terminal appear on the screen.

This function does not happen if your TV's main power is turned off. Set your TV's main power to on (standby mode).

Note:

- A "T-V LINK compatible VCR" means a JVC video cassette recorder with the T-V LINK logo, or with one of the following logos. However, these VCRs may support some or all of the features described earlier. For details, see your VCR instruction manual.

"Q-LINK" (a trademark of Panasonic Corporation)

"Data Logic" (a trademark of Metz Corporation)

"Easy Link" (a trademark of Phillips Corporation)

"Megalogic" (a trademark of Grundig Corporation)

"SMARTLINK" (a trademark of Sony Corporation)

Using your TV—the basics

■ Turn the main power on

Press the main power button on the TV

The power lamp lights red and your TV is in the standby mode.


If the power lamp lights green, the TV is already on.

To turn the main power off:

Press the main power button again.

The power lamp goes off.

The main power button on the TV does not fully cut the TV off from the mains supply. If you are not going to use this TV for a long time, be sure to pull the mains plug out of the mains outlet.

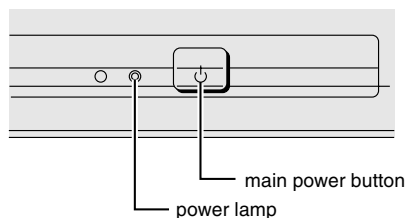

■ Turn the TV on from standby mode

Press the (standby) button, the TV button, the /▲ buttons or the number buttons

The power lamp goes from red to green and your TV will be turned on.

To turn the TV off:


Press the  (standby) button again.

The power lamp changes from green to red and the TV goes into standby mode.

■ Choose a TV channel

Choose the programme number (PR) that the TV channel has been set to.

Use the /▲ buttons:

Press the /▲ buttons to choose the programme number (PR) you want.

Use the number buttons:

Enter the programme number (PR) of the channel using the number buttons.



Example


- PR12 → press 1 and 2.
- PR6 → press 6.

Use the PR LIST:

- 1 Press the  (information) button to display the PR LIST

PR LIST		
PR	ID	
AV		
1	BBC1	
2	BBC2	
3	ITV	
4	CH4	
5	CH5	
6		
7		
8		
9		

    -10 +10

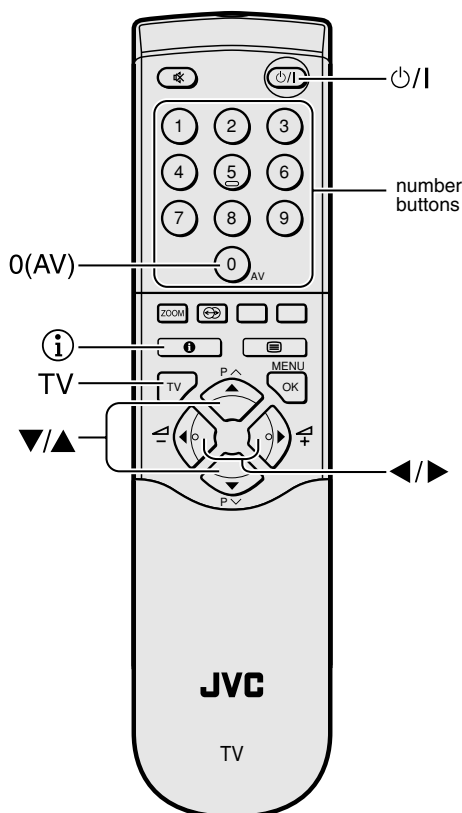

2 Press the ◀/▶ and ▼/▲ buttons to choose a programme number (PR). Then press the OK button

- For programme numbers (PR) where you have the CHILD LOCK function set, the **CL** (CHILD LOCK) mark appears next to the programme number (PR) in the PR LIST.
- You cannot use the ▼/▲ buttons to choose a programme number (PR) which has the CHILD LOCK set.
- Even if you try to choose a programme number (PR) with the CHILD LOCK set, the **CL** (CHILD LOCK) mark will appear, and you cannot watch the TV channel. To watch the TV channel, see "CHILD LOCK" on page 23.
- If you do not have a clear picture or no colour appears, change the colour system manually. See "COLOUR SYSTEM" on page 18.

■ Changing the volume

Press the ◀/▶ buttons to change the volume.

The volume indicator appears, and the volume changes, as you press the -/+ buttons.


■ Watching images from external equipment

Choose the EXT terminal that the external equipment has been connected to.

Use the 0 (AV) button:

Press the 0 (AV) button to choose an EXT terminal.

Pressing the 0 (AV) button changes the choice as follows:

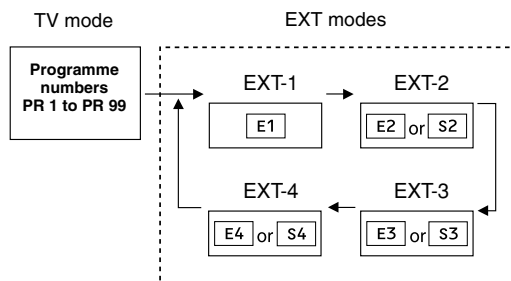

Use the ▼/▲ buttons:

Press the ▼/▲ buttons to choose an EXT terminal

Use the PR LIST:

1 Press the ⓘ (information) button to display the PR LIST


2 Press the ◀/▶ and ▼/▲ buttons to choose an EXT terminal. Then press the OK button

- The EXT terminals are listed after programme number PR 99.
- You can choose two types of video input signal: S-VIDEO (Y/C signal) and regular video (composite signal). For details, see "S-VIDEO (S-VIDEO input)" on page 21.
- If you do not have a clear picture or no colour appears, change the colour system manually. See "COLOUR SYSTEM" on page 18.
- If you choose an EXT terminal with no input signal, the EXT terminal number becomes fixed on the screen.
- This TV set can automatically change over the input according to a special signal from an external device. (The EXT-4 terminal does not support it.)

To use the programme number PR 0 (AV):

When the TV and VCR are connected only by the aerial cable, choosing the programme number PR 0 (AV) allows you to view images from the VCR. Set the VCR RF channel to programme number PR 0 (AV) manually. For details, see "EDIT/MANUAL" on page 26.

Pressing the 0 (AV) button changes the choice as follows:

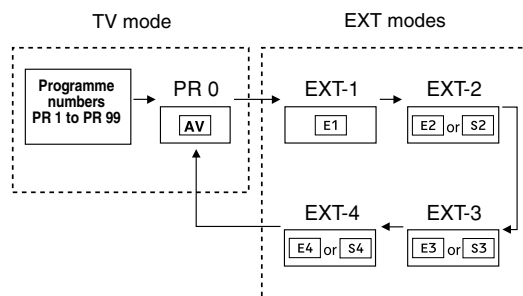

- The VCR sends its playback image along the aerial cable as an RF (radio frequency) signal.
- Also see your VCR instruction manual.


To return to a TV channel:

Press the TV button, the ▼/▲ buttons or the number buttons.


■ Using the buttons on the TV

- 1** Press the **P** ∇/\wedge buttons to turn the TV on from standby mode
- 2** Press the **P** ∇/\wedge buttons to choose a programme number (**PR**) or an **EXT** terminal
- 3** Press the \triangleleft (volume) button and the $-/+$ buttons to change the volume
 - 1** Press the \triangleleft (volume) button
The volume level indicator appears
 - 2** Press the $-/+$ buttons while the volume level indicator is on screen


Behind the Cover

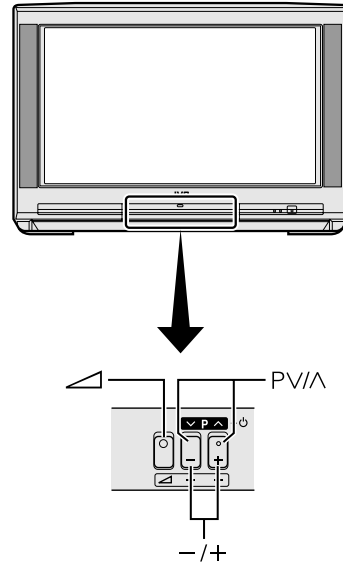

Remote control buttons and functions

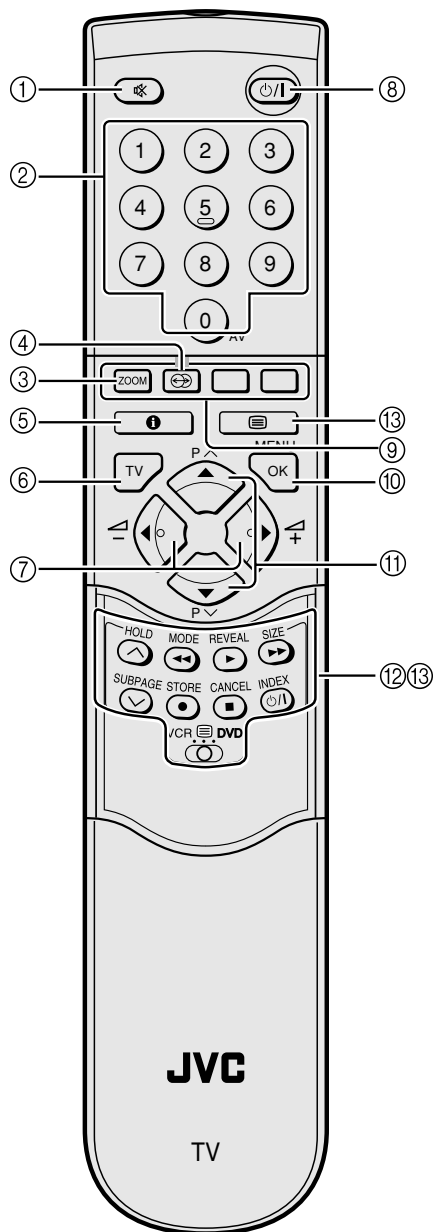

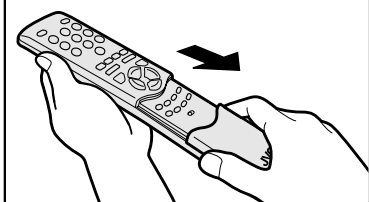


How to open the cover



① Muting button

You can turn the sound off instantly.

 Press the  (muting) button to turn off the sound. Pressing the  (muting) button again restores the previous volume level

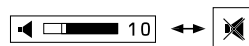

② Number buttons

You can choose a programme number (PR) by entering the programme number

Example

- PR12 → press 1 and 2.
- PR6 → press 6.

You can also press the 0 (AV) button repeatedly to choose an EXT terminal.

③ ZOOM button

You can change the screen size by changing the picture aspect ratio. The normal aspect ratio is 4:3 (width:height). Choose the ideal one from the following ZOOM modes.

AUTO (WSS):

For any picture format except normal picture (4:3 aspect ratio), the picture will be automatically displayed in the ideal screen size.

For normal picture (4:3 Aspect Ratio), you can choose a ZOOM mode from the 4:3 AUTO ASPECT menu. For details, see "4:3 AUTO ASPECT" on page 19.

- AUTO may not work properly with poor signal quality. In this case, choose the best ZOOM mode manually.
- This TV supports WSS (wide-screen signals). When broadcasts with WSS are received with the ZOOM mode set at AUTO (WSS), the most suitable ZOOM mode is automatically chosen according to the WSS received.

REGULAR:

Use to view a normal picture (4:3 aspect ratio) as this is its original shape.



PANORAMIC:

This stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the screen, without making the picture appear unnatural.



- The top and bottom of the picture are slightly cut off.

14:9 ZOOM:

This zooms up the wide picture (14:9 aspect ratio) to the upper and lower limits of the screen.



16:9 ZOOM:

This zooms up the wide picture (16:9 aspect ratio) to the full screen.



 
16:9 ZOOM SUBTITLE:

This zooms up the wide picture (16:9 aspect ratio) with subtitles to the full screen.



FULL:


This uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.

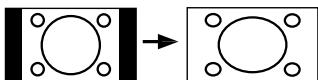

- For 16:9 aspect ratio pictures that have been squeezed into a normal picture (4:3 aspect ratio), use the FULL mode to restore the picture to its original shape.

Choose the ZOOM mode

- Press the ZOOM button to display the ZOOM menu

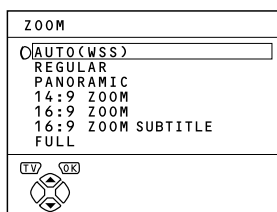

- Press the ▼/▲ buttons to choose a ZOOM mode. Then press the OK button

The picture expands and the chosen ZOOM mode is displayed in about 5 seconds.

- The ZOOM mode may be automatically changed by the control signal from an external device. When you want to return to the previous ZOOM mode, choose the ZOOM mode again.

Adjusting the visible area of the picture

 
If subtitles or the top (or bottom) of the picture are cut off, you can adjust the visible area of the picture manually.

- Press the ZOOM button

The ZOOM menu appears.

- Press the OK button to display the ZOOM mode indicator

The indicator appears.

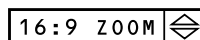

- While it is displayed, press the ▼/▲ buttons to change the height of the picture

- You cannot adjust the visible area in REGULAR or FULL mode.

④ HYPER SOUND button

You can enjoy sounds with a wider ambience.

Press the ⊕⊖ (HYPER SOUND) button to turn the HYPER SOUND function on or off


- The HYPER SOUND function does not work properly with mono sound.
- The HYPER SOUND function can be also turned on or off by using the SOUND SETTING menu. For details, see "HYPER SOUND" on page 20.

⑤ Information button

You can display the PR LIST or the current time on the screen.

Press the **i** (information) button

Pressing the **i** (information) button changes the display as follows:

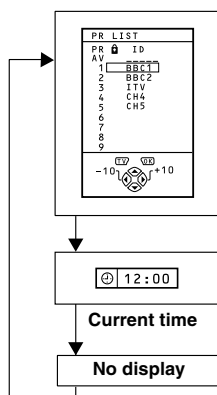

- You can choose programme numbers (PR) or EXT terminals with the PR LIST. For details, see "Use the PR LIST:" on page 8.
- This TV uses teletext data to set the time. If the TV has not received a TV channel that has teletext programmes since it was turned on, the time display is blank. To see the time, choose a TV channel that has teletext programmes. The time will still be displayed as long as you do not turn off the TV, even if you choose other TV channels.
- When watching videos, the incorrect time is sometimes displayed.
- The **i** (information) button will also operate menus. For details, see "Using the TV's menus" on page 16.

⑥ TV button

You can return to a TV channel instantly.

Press the **TV** button.

The TV returns to the TV mode and a TV channel appears.

- The **TV** button will also operate menus. For details, see "Using the TV's menus" on page 16.

⑦ ◀▶ Buttons

You can adjust the volume.

Press the **◀▶** buttons to adjust the sound.

- The **◀▶** buttons will also operate menus. For details, see "Using the TV's menus" on page 16.

⑧ Standby button

Press the **⏻/⏮** (standby) button to turn the TV on or off.

When the TV is turned on, the power lamp changes from red to green.

⑨ Colour buttons

The colour buttons are used for the teletext operations or the menu operations. For details, see "⑬ Teletext control buttons and VCR **≡** DVD switch" on page 14 or "Using the TV's menus" on page 16.

⑩ OK button

The **OK** button is used to operate menus. For details, see "Using the TV's menus" on page 16.

⑪ ▼/▲ Buttons

You can choose a programme number (PR) or an EXT terminal.

Press the **▼/▲** buttons to choose a Programme number (PR) or an EXT terminal.

The **▼/▲** buttons will also operate menus. For details, see "Using the TV's menus" on page 16.

⑫ VCR/DVD control buttons and VCR **≡** DVD switch

These buttons will operate a JVC brand VCR or DVD player. Pressing a button that looks the same as the device's original remote control button has the same effect as the original remote control.

1 Set the VCR **≡** DVD switch to the VCR or DVD position.

VCR:

When you are using a VCR, set the switch to the VCR position.


DVD:

When you are using a DVD player, set the switch to the DVD position.

2 Press the VCR/DVD control button to control your VCR or DVD player

- If your device is not made by JVC, these buttons will not work.
- Even if your device is made by JVC, some of these buttons may not work, depending on the device you are using.
- You can use the **▼/▲** buttons to choose a TV channel the VCR will receive, or choose the chapter the DVD player plays back.
- Some models of DVD player use the **▼/▲** buttons for both operating the fast forward/backward functions and for choosing the chapter. In this case, the **◀▶** buttons do not work.

■ ⑬ Teletext control buttons and VCR DVD switch

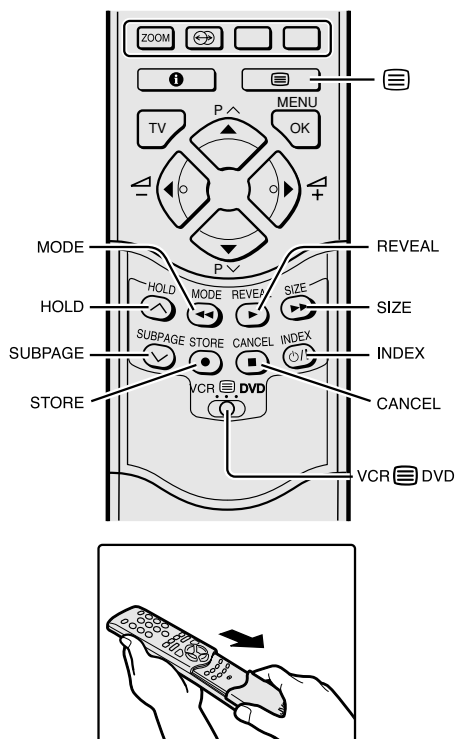

Basic operation


You can view two types of teletext broadcasts on the TV: FLOF (Fastext) and WST (World Standard Text).

- 1 Choose a TV channel with a teletext broadcast
- 2 Set the VCR DVD switch to the (Text) position



- 3 Press the (Text) button to display the teletext

Pressing the (Text) button changes the mode as follows:

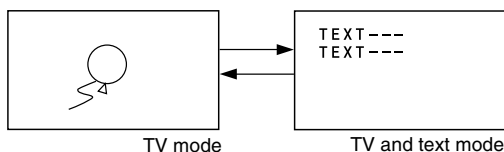

- 4 Choose a teletext page by pressing the /▲ buttons, number buttons or colour buttons

To return to the TV mode:

Press the **TV** button or (Text) button.

- If you have trouble receiving teletext broadcasts, contact your local dealer or the teletext station.
- The ZOOM function will not work in the text mode or TV and text mode.
- You cannot operate menus when viewing a teletext programme.

Using the List Mode


You can store the numbers of your favourite teletext pages in memory and call them up quickly using the colour buttons.

To store the page numbers:

- 1 Press the **MODE** button to go into the List mode

The page numbers you have stored are displayed at the bottom of the screen.

- 2 Press a colour button to choose a position. Then press the number buttons to enter the page number

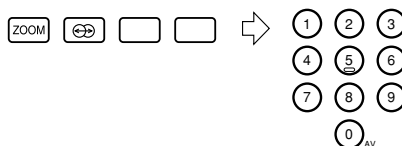

- 3 Press and hold down the **STORE** button

The four page numbers blink white to show that they are stored in memory.

To call up a stored page:

- 1 Press the **MODE** button to enter the List mode
- 2 Press a colour button having a stored page



 
To leave the List mode:

Press the **MODE** button again.

Hold

You can hold a teletext page on the screen for as long as you want, even while several other teletext pages are being received.

Press the HOLD button

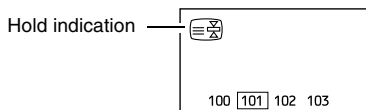

To cancel the Hold function:

Press the **HOLD** button again.

Sub-page

Some teletext pages include sub-pages that are automatically displayed.

You can hold any sub-page, or view it at any time.

- 1 Press the **SUBPAGE** button to operate the sub-page function
- 2 Press the number buttons to enter a sub-page number

Example

- 3rd sub-page → press **0, 0, 0, and 3**.

To cancel the sub-page function:

Press the **SUBPAGE** button again.

 
- You can also choose a sub-page by pressing the red or green button.

Reveal

Some teletext pages include hidden text (such as the answers to a quiz).

You can display the hidden text.


Each time you press the **REVEAL** button, text is hidden or revealed

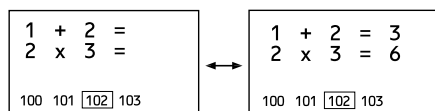

Size

You can double the height of the teletext display.

Press the SIZE button

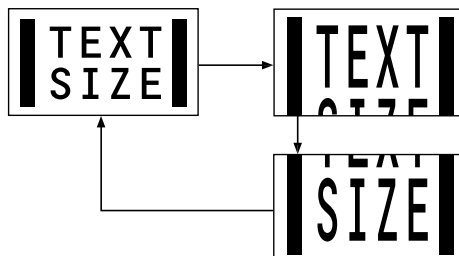

Index

You can return to the index page instantly.

Press the INDEX button

FLOF (Fastext)/WST (World Standard Text):

Returns to page 100 or a previously specified page.

List mode:

Returns to the page number displayed in the lower left area of the screen.

Cancel

You can search for a teletext page while watching TV.

- 1 Press the number button to enter a page number, or press a colour button

The TV searches for a teletext page.

- 2 Press the **CANCEL** button

The TV programme appears. When the TV finds the teletext page, its page number appears in the upper left of the screen.

- 3 Press the **CANCEL** button to return to a teletext page when the page number is on the screen

Note:


- The TV mode cannot be resumed by pressing the **CANCEL** button. To return to the TV mode press **TV**.

Using the TV's menus

This TV has a number of functions you can operate using menus. To use all your TV's functions fully, you need to understand how to use the basic menus.


1 Press the OK button to display the MENU (main menu)

The MENU (main menu) appears. In it, the titles of the menus are displayed.

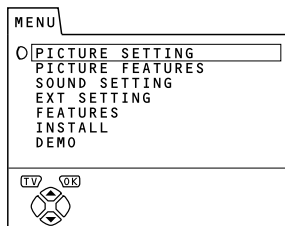

2 Press the ▼/▲ buttons to choose a menu title, and press the OK button

The menu appears.

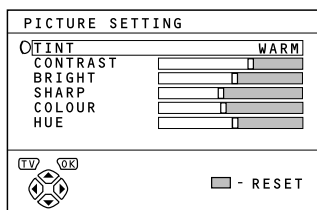

3 Follow the menus according to the function you want to use

- For more details, see the descriptions of each menu and its functions on the following pages.
- The display appearing at the bottom of a menu shows you a button on the remote control that you can use when you operate a chosen function.

4 Press the OK button to complete the setting

The menu disappears.

To return to the previous menu:


Press the **ⓘ** (information) button.

To exit a menu instantly:

Press the **TV** button.

- When watching the television with the NTSC system, the menus are displayed at about half of their normal vertical size.

Picture setting

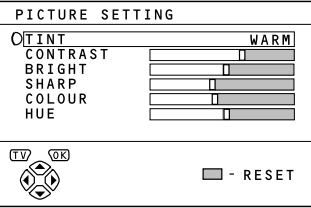

To display the PICTURE SETTING menu:

- 1 Press the **OK** button to display the MENU (main menu)
- 2 Press the **▼/▲** buttons to choose PICTURE SETTING, and press the **OK** button

TINT

You can select one of three TINT modes (three kinds of picture settings) to adjust the picture settings automatically.

- 1 Press the **▼/▲** buttons to choose TINT
- 2 Press the **◀/▶** buttons to choose a mode
COOL:
A cool white colour base with a boost in the colour and contrast levels that creates a more vivid picture.
WARM:
A warm orange/red colour base that creates the appropriate colour and contrast levels for watching films.
NORMAL:
A normal white colour base with normal colour and contrast levels.
- 3 Press the **OK** button to complete the setting
The menu disappears.

Picture adjustment

You can change the picture settings of each TINT mode as you like.

The picture settings changed are stored in the TINT mode.

- 1 Press the **▼/▲** buttons to choose an item
- 2 Press the **◀/▶** buttons to change the setting

◀	Item	▶
Lower	CONTRAST (picture contrast)	Higher
Darker	BRIGHT (picture brightness)	Brighter
Softer	SHARP (picture sharpness)	Sharper
Lighter	COLOUR (picture colour)	Deeper
Reddish	HUE (picture hue)	Greenish


- You can change the HUE setting (picture hue) only when the colour system is NTSC 3.58 or NTSC 4.43. (See "Specifications" on the back cover.)

To return to the default settings in each TINT mode:

Press the blue button.
This returns the picture settings in the TINT mode you have chosen to the default settings, and stores them in the TINT mode.

- 3 Press the **OK** button to complete the settings
The menu disappears.

Picture features

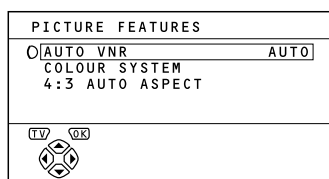

To display the PICTURE FEATURES menu:

- 1 Press the **OK** button to display MENU (main menu)
- 2 Press the **▼/▲** buttons to choose PICTURE FEATURES, and press the **OK** button

■ AUTO VNR

VNR Stands for “video noise reduction”.

The AUTO VNR function reduces any “noise” (interference or snowing) in the current picture. The function also adjusts the optimum Sharpness of the picture (SHARP).

- 1 Press the **▼/▲** buttons to choose AUTO VNR
- 2 Press the **◀/▶** buttons to choose AUTO

MIN:

The AUTO VNR function is cancelled. When you set the mode to AUTO but feel that the sharpness of the original picture has not been reproduced fully, change the mode to MIN. However, any noise remaining in the original picture may be emphasized.

MAX:

This mode always reduces any noise as much as possible, irrespective of state of the picture. When you set the mode to AUTO but still notice some noise, change the mode to MAX. However, this may reduce the sharpness of the picture.

- 3 Press the **OK** button to complete the setting


The menu disappears.

■ COLOUR SYSTEM

The colour system is chosen automatically. However, if the picture is not clear or no colour appears, choose the colour system manually.

- 1 Press the **▼/▲** buttons to choose COLOUR SYSTEM. Then press the **OK** button

The sub-menu of the COLOUR SYSTEM function appears.

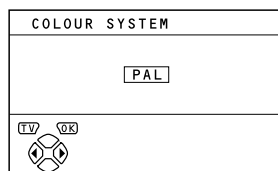

- 2 Press the **◀/▶** buttons to choose the appropriate colour system

PAL:

PAL system

NTSC 3.58:

NTSC 3.58 MHz system

NTSC 4.43:

NTSC 4.43 MHz system

AUTO:

This function detects a colour system from the input signal. You can only use this when you are viewing a picture from programme number PR 0 (AV), or an EXT terminal.

- 3 Press the **OK** button to complete the setting

The menu disappears.


- The AUTO function may not work properly if you have poor signal quality. If the picture is abnormal in the AUTO function, choose another colour system manually.
- You cannot choose NTSC 3.58 or NTSC 4.43 for programme numbers PR 0 (AV) to PR 99.

■ 4:3 AUTO ASPECT

You can choose one of three ZOOM modes, REGULAR, PANORAMIC or 14:9 ZOOM, as the ZOOM mode for the normal picture (4:3 aspect ratio).

1 Press the ▼/▲ buttons to choose 4:3 AUTO ASPECT. Then press the OK button

The sub-menu of the 4:3 AUTO ASPECT function appears.

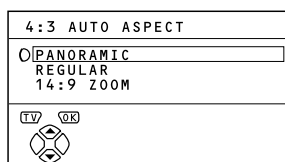


2 Press the ▼/▲ buttons to choose a ZOOM mode

3 Press the OK button to complete the setting

The menu disappears.

Sound setting

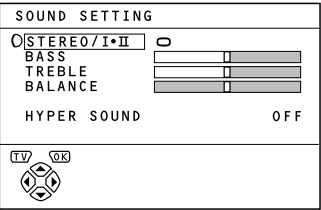

To display the SOUND SETTING menu:

- 1 Press the **OK** button to display the MENU (main menu)
- 2 Press the **▼/▲** buttons to choose **SOUND SETTING**. Then press the **OK** button

■ STEREO / I•II

When you are viewing a bilingual broadcast programme, you can choose the sound from Bilingual I (Sub I) or Bilingual II (Sub II). If you have poor reception on a stereo broadcast, you can change from stereo to mono sound so that you can hear the broadcast more clearly and easily.

- 1 Press the **▼/▲** buttons to choose **STEREO / I•II**
- 2 Press the **◀/▶** buttons to choose a sound mode

- ∞ : Stereo sound
- : mono sound
- I : Bilingual I (sub I)
- II : Bilingual II (sub II)

- 3 Press the **OK** button to complete the setting

The menu disappears.

- The sound mode you can choose differs depending on the TV programme.
- This function does not work in the EXT modes. And this function does not appear in the SOUND SETTING menu.

■ Sound adjustment

You can adjust the sound to your liking.

- 1 Press the **▼/▲** buttons to choose an item
- 2 Press the **◀/▶** buttons to adjust it

◀	Item	▶
Weaker	BASS	Stronger
Weaker	TREBLE	Stronger
Left	BALANCE	Right

- 3 Press the **OK** button to complete the setting

The menu disappears.

■ HYPER SOUND


You can enjoy sounds with a wider ambience.

- 1 Press the **▼/▲** buttons to choose **HYPER SOUND**
- 2 Press the **◀/▶** buttons to choose **ON**
To cancel the **HYPER SOUND** function:
Press the **◀/▶** buttons to choose **OFF**.
- 3 Press the **OK** button to complete the setting

The menu disappears

- The **HYPER SOUND** function does not work properly with mono sound.
- You can turn the **HYPER SOUND** function on or off with a single press. For details, see "④ **HYPER SOUND** button" on page 12.

EXT SETTING

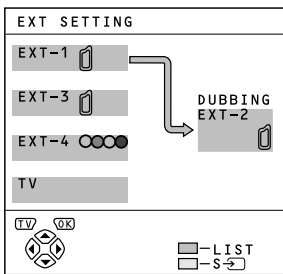

To display the EXT SETTING menu:

- 1 Press the **OK** button to display the **MENU** (main menu)
- 2 Press the **▼/▲** buttons to choose **EXT SETTING**. Then press the **OK** button


■ S-VIDEO (S-VIDEO input)

You can connect a device (such as an S-VHS VCR) to enjoy the high-quality picture of the S-VIDEO signal (Y/C signal).

Preparation:

- First read the device's instruction manual and "Further preparation" on page 31 to connect the device to the TV properly. Second, follow the device's instruction manual to set the device so that it sends an S-VIDEO signal (Y/C signal) to the TV.
- Do not set S-VIDEO (S-VIDEO input) to an EXT terminal connected to a device which cannot output an S-VIDEO (Y/C signal). If it is set wrongly, a picture cannot appear.

- 1 Press the **▼/▲** buttons or **◀/▶** buttons to choose an EXT terminal

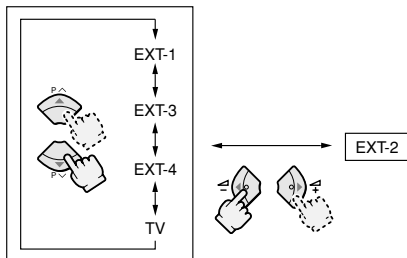

- 2 Press the **yellow** button and set the **S-VIDEO** (S-VIDEO input)

An **S-VIDEO** (S-VIDEO input) mark is displayed. You can view an S-VIDEO signal (Y/C signal) instead of the regular video signal (composite signal).

To cancel the S-VIDEO (S-VIDEO input) setting:

Press the yellow button and turn off the **S-VIDEO** (S-VIDEO input) mark.

The regular video signal (composite signal) pictures are resumed.

- 3 Press the **OK** button to complete the setting


The menu disappears.

- The EXT-1 terminal does not support S-VIDEO signal (Y/C signal) and you cannot set S-VIDEO (S-VIDEO input) in the EXT-1 terminal.
- Setting S-VIDEO (S-VIDEO input) changes the head character from "E" to "S". When an EXT terminal receives a normal video signal, "E1", "E2", "E3" or "E4" appears on the display. This changes to "S2", "S3" or "S4" when it receives an S-VIDEO signal.
- Even a device which can output an S-VIDEO signal (Y/C signal) may output a regular video signal (composite signal) depending on the device setting. If a picture cannot appear because the S-VIDEO (S-VIDEO input) setting has been made, read the device instruction manual carefully again to check for the device settings.


■ LIST

You can store a name for each of the devices connected to each EXT terminal. Giving a name to an EXT terminal makes the EXT terminal number appear on the screen, together with its name.

- 1 Press the **▼/▲** buttons or **◀/▶** buttons to choose an EXT terminal

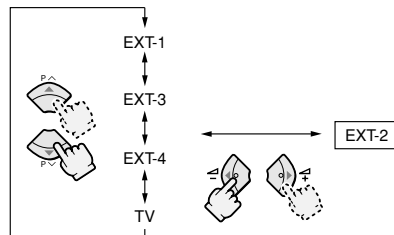

- 2 Press the **blue** button to display the name list (LIST)

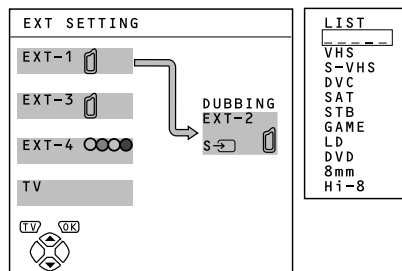

- 3 Press the **▼/▲** buttons to choose a name. Then press the **OK** button

The **LIST** disappears and the name is assigned to the EXT terminal.

To erase a name assigned to the EXT terminal:
Choose a blank space.

- 4 Press the **OK** button to complete the setting

The menu disappears.


- You cannot choose an EXT terminal name that is not on the name list (ID LIST).

■ DUBBING

You can choose a signal source to be output from the EXT-2 terminal.

You can do this with the output signal of the device connected to another EXT terminal, or the picture and sound from a TV channel you are currently viewing.

- 1 Press the ◀/▶ buttons to choose the EXT-2 terminal.
- 2 Press the ▼/▲ buttons to choose another EXT terminal or TV.

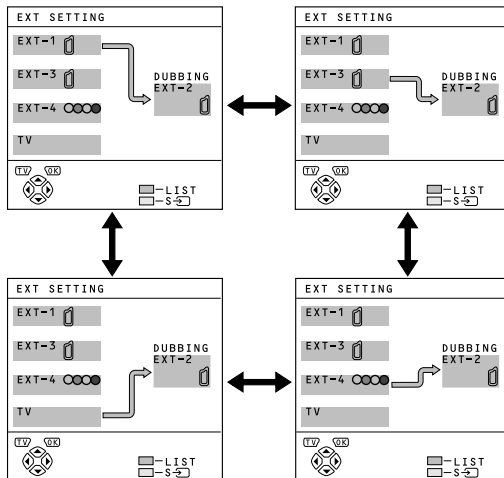

The arrow in the menu represents a signal flow. The left side of the arrow shows a signal source output from the EXT-2 terminal.

EXT-1/EXT-3/EXT-4:

The output signal of the device connected to an EXT terminal passes through the TV and is output from the EXT-2 terminal.

TV:


The picture and sound of the TV channel you are currently viewing are output from the EXT-2 terminal.

- 3 Press the OK button to complete the setting.

The menu disappears.

- During dubbing, you cannot turn off the TV. Turning off the TV also turns off the output from the EXT-2 terminal.
- When you choose an EXT terminal as an output, you can view a TV programme or a picture from the other EXT terminal while dubbing the picture from a device connected to the EXT terminal onto a VCR connected to the EXT-2 terminal.
The RGB signals from TV games cannot be output. Teletext programmes cannot be output.

FEATURES

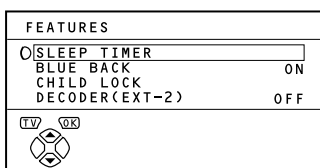

To display the FEATURES menu:


- 1 Press the **OK** button to display the MENU (main menu)
- 2 Press the **▼/▲** buttons to choose FEATURES. Then press the **OK** button

■ SLEEP TIMER

You can set the TV to automatically turn off after a set time.

- 1 Press the **▼/▲** buttons to choose SLEEP TIMER. Then press the **OK** button

A sub-menu of the SLEEP TIMER function appears.

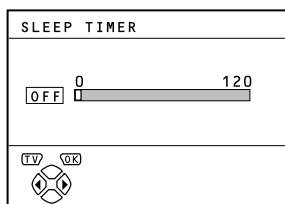

- 2 Press the **◀/▶** buttons to set the period of time

You can set the time for up to 120 minutes (2 hours) in 10 minute steps.

To cancel the SLEEP TIMER function:

Press the **◀** button to set the period of time to "OFF."

- 3 Press the **OK** button to complete the setting

The menu disappears.

- One minute before the SLEEP TIMER function turns off the TV, "GOOD NIGHT!" appears.
- The SLEEP TIMER function cannot be used to turn off the TV's main power.
- When the SLEEP TIMER function is on, you can display the sub-menu of the SLEEP TIMER function again to confirm or change the remaining period of time of the SLEEP TIMER function. Press the **OK** button to leave the menu after confirming or changing the remaining time.

■ BLUE BACK

You can set the TV to automatically change to a blue screen and mute the sound if the signal is weak or absent, or when there is no input from an external device.

- 1 Press the **▼/▲** buttons to choose BLUE BACK
- 2 Press the **◀/▶** buttons to choose ON

To cancel the BLUE BACK function:

Press the **◀/▶** buttons to choose OFF.

- 3 Press the **OK** button to complete the setting

The menu disappears.


■ CHILD LOCK

When there is a TV channel you do not want your children to watch, you can use the CHILD LOCK function to lock out the TV channel. Even when a child chooses a programme number (PR) for a locked TV channel the screen will change to blue and display **⏏** (CHILD LOCK) so the TV channel cannot be viewed. Unless you enter a pre-set ID number by a special operation, the lock cannot be released and the child cannot view the TV channel.

To set the CHILD LOCK function

- 1 Press the **▼/▲** buttons to choose CHILD LOCK. Then press the **0 (AV)** button

"SET ID NO." (ID number setting screen) appears.

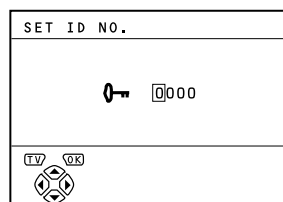


- 2 To set the ID number you want

- 1 Press the **▼/▲** buttons to choose a number
- 2 Press the **◀/▶** buttons to move the cursor

- 3 Press the **OK** button


The sub-menu of CHILD LOCK appears.

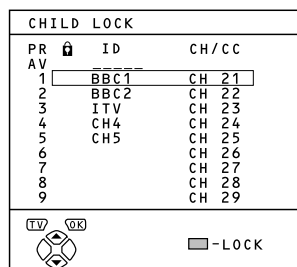

- 4 Press the **▼/▲** buttons to choose a TV channel

Every time you press the **▼/▲** buttons, the programme number (PR) changes, and the picture of the TV channel registered in the programme number (PR) is displayed on the screen.

 5 Press the blue button and set the CHILD LOCK function

 (CHILD LOCK) appears and the TV channel is locked.

To reset the CHILD LOCK function:

Press the blue button again.

 (CHILD LOCK) disappears.

 
6 Press the OK button to complete the setting


The menu disappears.

- To disable easy resetting of the CHILD LOCK function, the menu disappears if you choose the CHILD LOCK function and press the **OK** button.


To view a locked TV channel

1 Choose a programme number (PR) for a locked TV channel, by using the number buttons or PR LIST

 The screen changes to blue and the  (CHILD LOCK) appears. You cannot view the TV channel.

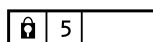

 2 Press the (information) button to display "ID NO." (ID NO. input screen)

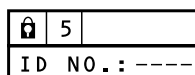


3 Press the number buttons to enter the ID number

The lock is temporarily released so you can view the TV channel.

If you have forgotten the ID number:

 Perform step 1 of "To set the CHILD LOCK function". After confirming the ID number, press the **TV** button to exit the menu.


- Even if you reset the lock temporarily, it does not mean that the CHILD LOCK function set for the TV channel is cancelled. The next time anyone tries to view the TV channel, it will be locked again.
- When you want to cancel the CHILD LOCK function, you must perform the operation "To set the CHILD LOCK function" again.
- To stop it being easy to choose the programme number (PR) of a locked TV channel, the programme number (PR) has been set so that it cannot be chosen by the **▼/▲** buttons or the buttons of the TV.
- To stop it being easy to reset the lock, "ID NO." (ID NO. input screen) is set so that it cannot appear unless you press the  (Information) button.

■ DECODER (EXT-2)

You can only use this function if you have a decoder connected to a T-V LINK compatible VCR, which in turn is connected to the EXT-2 terminal. To use this function, see "Using the DECODER (EXT-2) function" on page 30.

- If you have not connected a decoder with a T-V LINK compatible VCR to the EXT-2 terminal, setting this function to "ON" by mistake causes the picture/sound of a TV channel you are currently viewing to disappear.

INSTALL

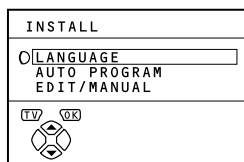

To display the INSTALL menu:

- 1 Press the **OK** button to display the MENU (main menu)
- 2 Press the **▼/▲** buttons to choose the **INSTALL** menu. Then press the **OK** button

■ LANGUAGE

You can choose the language you want to use for the on-screen display from the language list in the menu.

- 1 Press the **▼/▲** buttons to choose **LANGUAGE**. Then press the **OK** button

A sub-menu of the LANGUAGE function appears.



- 2 Press the **◀/▶** and **▼/▲** buttons to choose a language
- 3 Press the **OK** button to complete the setting



The menu disappears.

■ AUTO PROGRAM

You can automatically store the TV channels for which you have the best reception. Store them in the TV's programme numbers (PR) list by doing the following.

- 1 Press the **▼/▲** buttons to choose **AUTO PROGRAM**
- 2 Press the **OK** button to start the **AUTO PROGRAM** function

The AUTO PROGRAM menu appears and the TV channels you receive are automatically registered in the programme numbers (PR) list.

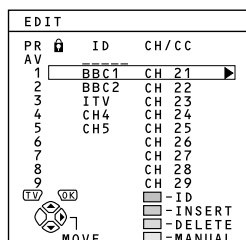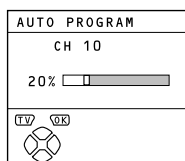

To cancel the **AUTO PROGRAM** function:

Press the **TV** button.


- 3 After the TV channels have been stored in the programme numbers (PR) list, the **EDIT** menu appears

You can now edit the programme numbers (PR) list using the **EDIT/MANUAL** function. For details, see "EDIT/MANUAL" on page 26.

When not using the EDIT/MANUAL function:

If you do not need to use the **EDIT/MANUAL** function, go to the next step.

- 4 Press the **OK** button to display the **T-V LINK** menu

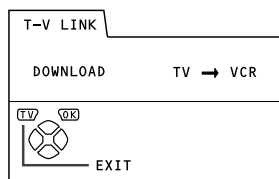

- 5 Operate the **T-V LINK** menu according to the type of video cassette recorder (VCR) you have connected to the **EXT-2** terminal

If you do not have a T-V LINK compatible VCR connected:

Press the **TV** button to leave the T-V LINK menu.

The T-V LINK menu disappears, and all the settings are completed.

If you have a T-V LINK compatible VCR connected:

See "Downloading data to a VCR" on page 30 to transmit the programme number (PR) data to the VCR.

- If a TV channel you want to view is not set to a programme number (PR), set it manually using the **MANUAL** function. For details, see "EDIT/MANUAL" on page 26.
- The **AUTO PROGRAM** function does not set the programme number PR 0 (AV) for your video cassette recorder. You will need to set this using the manual function.
- In some areas you may get TV reception from more than one transmitter, for example different **ITV** regions. In this case each TV channel could be set twice. If this happens, the first set of channels will have the stronger signal. If you want to delete the second set of channels, you will have to do it manually (see page 28).

■ EDIT/MANUAL

The EDIT/MANUAL functions are divided into two types:

- editing the current programme numbers (PR) (EDIT functions); and
- manually storing a TV channel you want to view as a programme number (PR) (MANUAL function).

Here are the details about these functions:

MOVE:

This function changes the programme number (PR) of a TV channel.

ID:

This function registers a channel name (ID) to a TV channel.

INSERT:

This function adds a new TV channel in the current programme numbers (PR) list by using the CH/CC number.

DELETE:

This function deletes a TV channel you do not want to list.

MANUAL:


This function manually stores a new TV channel in a programme number (PR).

- For programme number PR 0, "AV" appears in the programme numbers (PR) list.
- An EXT terminal number does not appear in the programme numbers (PR) list.
- The CH/CC number is a number unique to the TV and corresponds to the channel number of a TV channel. For the relationship between a channel number and a CH/CC number, see "CH/CC NUMBER" on page 28.
- You cannot use the INSERT function if you do not know the channel number of a TV channel. Use the MANUAL function to register a TV channel in the programme number (PR) list.

Caution:

- Using the MOVE, DELETE or INSERT functions rewrites the current programme numbers (PR) list. Therefore, the programme numbers (PR) of some of the TV channels will change.
- Using the MANUAL function for a TV channel for which the CHILD LOCK function has been set cancels the CHILD LOCK function for that channel.
- Using the MANUAL function for a TV channel for which the DECODER (EXT-2) function has been set to ON returns the setting of the DECODER (EXT-2) function for that channel to OFF.
- When a TV channel has already been registered in PR 99, using the INSERT function deletes that TV channel.


- 1 Press the ▼/▲ buttons to choose EDIT/MANUAL. Then press the OK button

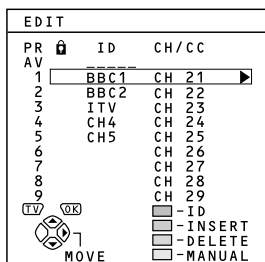

- 2 Follow the options for the function you want to use

- 3 Press the OK button to complete the settings

The T-V LINK menu appears.

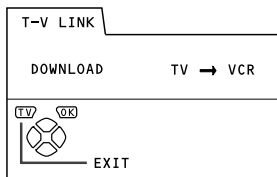

- 4 Follow the T-V LINK menu according to the type of VCR you have connected to the EXT-2 terminal

If you do not have a T-V LINK compatible VCR connected:

Press the TV button to leave the T-V LINK menu.

The T-V LINK menu disappears and all the settings are completed.

If you have a T-V LINK compatible VCR connected:


Follow the operating procedure "Downloading data to a VCR" on page 30 to transmit the programme number (PR) data to the VCR.

MOVE

- 1 Press the ▼/▲ buttons to choose a TV channel

Every time you press the ▼/▲ buttons, the programme number (PR) changes, and the picture of the TV channel stored in the programme number (PR) appears on the screen.

- 2 Press the ► button to start the MOVE function

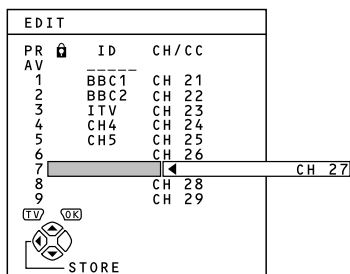

- 3 Press the ▼/▲ buttons to choose a new programme number (PR)

To cancel the MOVE function:

Press the (i) (information) button.


- 4 Press the ◀ button to change the programme number (PR) of a TV channel to a new programme number (PR)

ID


1 Press the ▼/▲ buttons to choose a TV channel

Every time you press the ▼/▲ buttons, the programme number (PR) changes, and the picture of the TV channel stored in the programme number (PR) appears on the screen.


2 Press the red button to start the ID function

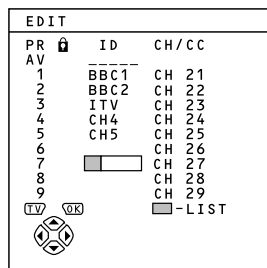

3 Press the ▼/▲ buttons to choose the first character of a channel name (ID) you want to give the TV channel

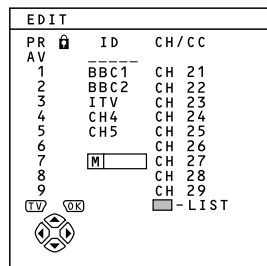

4 Press the blue button to display the ID LIST (channel name list)

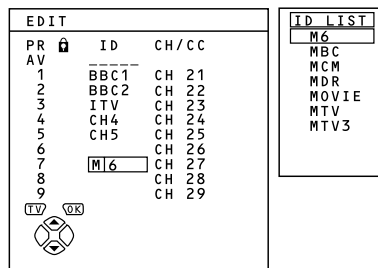

5 Press the ▼/▲ buttons to choose the channel name (ID)

To cancel the ID function:

Press the ⓘ (Information) button.

6 Press the OK button to give a channel name (ID) to a TV channel

- You can give your own unique channel name (ID) to the TV channel. When you have finished step 3, do not go to step 4. Press the ◀/▶ buttons to move the cursor, and press the ▼/▲ buttons to choose each character of the channel name (ID). Then press the OK button to register the channel name (ID) to the TV channel.


INSERT

Preparation:

- You need to find the CH/CC number for the TV channel. Find the CH/CC number from the "CH/CC NUMBER" table on page 28 based on the channel number of the TV channel.

1 Press the ▼/▲ buttons to choose a Programme number (PR) for which you will register a new TV channel

2 Press the green button and start the INSERT function

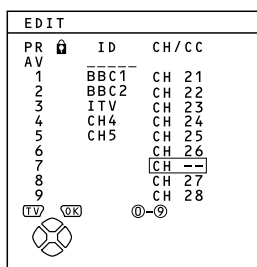

To cancel the INSERT function:

Press the ⓘ (Information) button.

3 For UK model (AV28CT1EK):

Press the number buttons to enter the remaining CH number.

- You cannot enter CC numbers.

For Ireland model (AV28CT1EI):

Press the ▼/▲ buttons to choose "CH" or "CC", then enter the remaining CH or CC number.

The TV shifts to registration mode.

When the registration is completed, the picture of the TV channel appears on the screen.

- The CH/CC number is a number given to each broadcast frequency that carries a TV channel. If the TV cannot detect the TV channel corresponding to the broadcast frequency indicated by the CH/CC number, a "no-signal" picture appears.

DELETE

1 Press the ▼/▲ buttons to choose a TV channel

Every time you press the ▼/▲ buttons, the programme number (PR) changes over, and the picture of the TV channel stored in the programme number list (PR) appears on the screen.


2 Press the yellow button to delete the TV channel

The TV channel is deleted from the programme numbers (PR) list.

MANUAL

1 Press the ▼/▲ buttons to choose a programme number (PR) for a new TV channel

2 Press the blue button to activate the MANUAL function

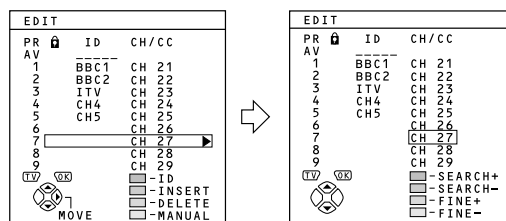

To cancel the MANUAL function:

Press the ⓘ (Information) button.

3 Press the green or red button to search for a TV channel

Scanning stops when the TV finds a TV channel. Then the TV channel is displayed.

4 Press the green or red button repeatedly until the TV channel you want appears

If the TV channel reception is poor:

Press the blue or yellow button to fine-tune the TV channel.

5 Press the OK button and register the TV channel to a programme number (PR)

The normal EDIT menu appears.


CH/CC NUMBER

- When you want to use the INSERT function on page 27, find the CH/CC number corresponding to the channel number of the TV channel from this table. If you want to know a particular TV channel's channel menu, look in TV listings magazines or contact the broadcaster.
- The UK model (AV28CT1EK) cannot receive the CC number channels or the channels from CH 02 to CH 12.

CH	Channel	CH	Channel
CH 02	E2, IR A	CH 40	E40
CH 03	E3, IR B, ITALY A	CH 41	E41
CH 04	E4, IR C, ITALY B	CH 42	E42
CH 05	E5, IR D, ITALY D	CH 43	E43
CH 06	E6, IR E, ITALY E	CH 44	E44
CH 07	E7, IR F, ITALY F	CH 45	E45
CH 08	E8, IR G	CH 46	E46
CH 09	E9, ITALY G	CH 47	E47
CH 10	E10, IR H, ITALY H	CH 48	E48
CH 11	E11, IR J, ITALY H+1	CH 49	E49
CH 12	E12, ITALY H+2	CH 50	E50
CH 21	E21	CH 51	E51
CH 22	E22	CH 52	E52
CH 23	E23	CH 53	E53
CH 24	E24	CH 54	E54
CH 25	E25	CH 55	E55
CH 26	E26	CH 56	E56
CH 27	E27	CH 57	E57
CH 28	E28	CH 58	E58
CH 29	E29	CH 59	E59
CH 30	E30	CH 60	E60
CH 31	E31	CH 61	E61
CH 32	E32	CH 62	E62
CH 33	E33	CH 63	E63
CH 34	E34	CH 64	E64
CH 35	E35	CH 65	E65
CH 36	E36	CH 66	E66
CH 37	E37	CH 67	E67
CH 38	E38	CH 68	E68
CH 39	E39	CH 69	E69

CC	Channel	CC	Channel
CC 01	S1	CC 31	S31
CC 02	S2	CC 32	S32
CC 03	S3	CC 33	S33
CC 04	S4	CC 34	S34
CC 05	S5	CC 35	S35
CC 06	S6	CC 36	S36
CC 07	S7	CC 37	S37
CC 08	S8	CC 38	S38
CC 09	S9	CC 39	S39
CC 10	S10	CC 40	S40
CC 11	S11	CC 41	S41
CC 12	S12	CC 75	X
CC 13	S13	CC 76	Y
CC 14	S14	CC 77	Z, ITALY C
CC 15	S15	CC 78	Z+1
CC 16	S16	CC 79	Z+2
CC 17	S17		
CC 18	S18		
CC 19	S19		
CC 20	S20		
CC 21	S21		
CC 22	S22		
CC 23	S23		
CC 24	S24		
CC 25	S25		
CC 26	S26		
CC 27	S27		
CC 28	S28		
CC 29	S29		
CC 30	S30		

DEMO

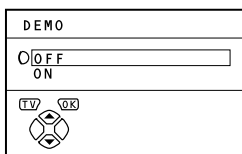

To display the DEMO menu:

- 1 Press the **OK** button to display the MENU (main menu)
- 2 Press the **▼/▲** buttons to choose DEMO. Then press the **OK** button

The DEMO function automatically demonstrates some of the TV functions.

- 1 Press the **▼/▲** buttons to choose ON
- 2 Press the **OK** button to complete the setting

The DEMO function is set to ON, and the demonstration will start.

To stop the demonstration:

Press one of the buttons on the remote control.

When the DEMO function is set to ON:

Each time the TV is turned on, the demonstration starts automatically. If you do not want that to happen, cancel the DEMO function:


- 1 Display the DEMO menu again
- 2 Press the **▼/▲** buttons to choose OFF
- 3 Press the **OK** button to cancel the DEMO function

Other menus

■ Downloading data to a VCR

You can send the latest programme numbers (PR) data to a VCR with the T-V LINK function.


- You can only do this when a T-V LINK compatible VCR is connected to the EXT-2 terminal.
- This only works when the T-V LINK menu is being displayed.

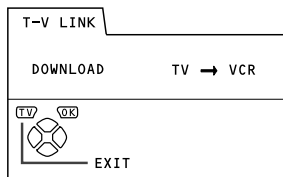

1 Turn on the VCR

2 Press the OK button

 The data transmission begins.

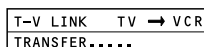

The T-V LINK menu disappears once the data transmission ends.

When the T-V LINK menu changes over to another menu:

The TV has finished its menu. This new menu is operated from the VCR. See the VCR instruction manual for what to do next.

- If "FEATURE NOT AVAILABLE" appears at the T-V LINK menu, check the following three items. Then press the **OK** button to retry data transmission.
 - Has a T-V LINK compatible VCR been connected to the EXT-2 terminal?
 - Has the VCR power been turned on?
 - Does the SCART cable that connects the EXT-2 terminal to the T-V LINK compatible VCR have all its proper connections?

■ Using the DECODER (EXT-2) function

If you have a decoder connected to a T-V LINK compatible VCR, which in turn is connected to the EXT-2 terminal, use the DECODER (EXT-2) function to unscramble the scrambled TV channels.

1 Turn on the decoder power

2 Display the scrambled TV channel on the TV


Even if the decoder is working, a scrambled picture appears.

3 Press the OK button to display the MENU

The MENU (main menu) appears.

4 Press the ▼/▲ buttons to choose FEATURES. Then press the OK button

The FEATURES menu appears.

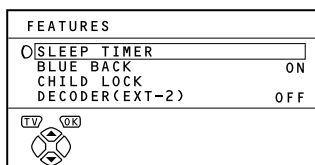

5 Press the ▼/▲ buttons to choose DECODER (EXT-2). Then press the ◀/▶ buttons to choose ON


An unscrambled picture appears.

To cancel the DECODER (EXT-2) function:

Press the ◀/▶ buttons to choose OFF.

6 Press the OK button to complete the setting

The T-V LINK menu appears.

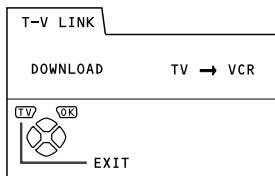

7 Follow "Downloading data to a VCR" on page 30 to transmit the programme number (PR) data to the VCR

8 If you have another TV channel you want to unscramble using a decoder, repeat steps 2 to 7.

- If the DECODER (EXT-2) function has been set to "ON" but the TV channel cannot be unscrambled, check the following:
 - Has the decoder been connected to the VCR properly according to the VCR and decoder instruction manuals?
 - Has the decoder power been turned on?
 - Can the TV channel be unscrambled with a decoder?
 - Do you need to change the VCR settings in order to connect the decoder? Confirm that the VCR is set properly by rechecking the VCR Instruction manual.

Further preparation

■ Connecting external equipment


Connect the equipment to the TV, making the correct rear panel and front panel connections.

Before connecting anything:


- Read the manuals that came with the equipment. Depending on the equipment, the connection method may be different from the diagram. Also, the equipment settings may need to change depending on the connection method.
- Turn off all the equipment including the TV.
- The "Specifications" on the back cover give the details of the EXT terminals. If you are connecting equipment not listed in the following connection diagram, see the table to choose the best EXT terminal.
- Connecting cables are not supplied.

- ① VCR (composite signal)
- ② VCR (composite signal/S-VIDEO signal)
- ③ T-V LINK compatible VCR (composite signal/S-VIDEO signal)
- ④ Decoder
- ⑤ DVD player (composite signal/S-VIDEO signal)
- ⑥ DVD player (composite signal/RGB signal)
- ⑦ TV game (composite signal/RGB signal)
- ⑧ TV game (composite signal/S-VIDEO signal)
- ⑨ Headphones
- ⑩ Camcorder (composite signal/S-VIDEO signal)
- ⑪ SCART cable
- ⑫ Audio cable
- ⑬ Video cable
- ⑭ S-VIDEO cable

Behind the Cover

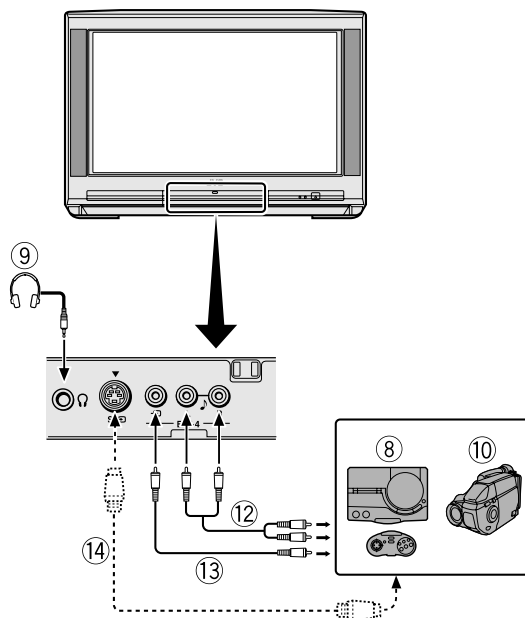

Back of the TV

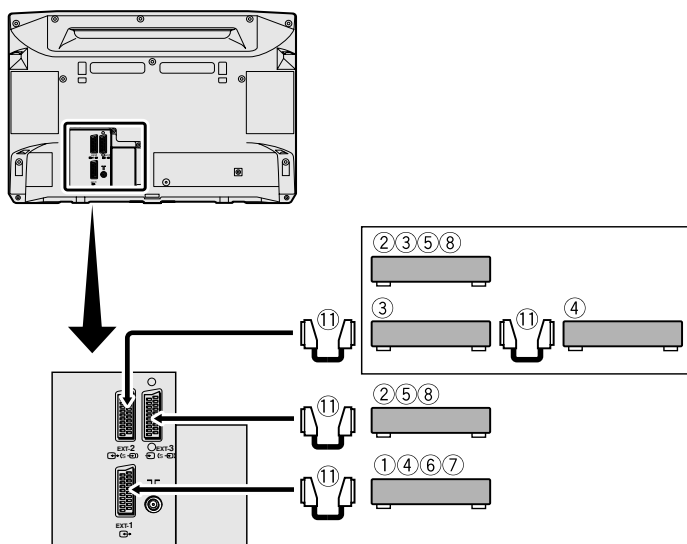

Equipment which can output the S-VIDEO signal (Y/C signal) such as an S-VHS VCR

Connect the equipment to an EXT terminal (but not the EXT-1 terminal).

You can choose between an S-VIDEO signal (Y/C signal) and a regular video signal (composite signal). For details of how to operate the equipment, see “S (S-VIDEO input)” on page 21.

T-V LINK compatible VCR

Be sure to connect the T-V LINK compatible VCR to the EXT-2 terminal. If not, the T-V LINK function will not work properly.

- When connecting a T-V LINK compatible VCR to the EXT-2 terminal, be sure to connect the decoder to the VCR. If not, the T-V LINK function may not work properly. After you have stored TV channels in the programme numbers (PR) list, set the DECODER (EXT-2) function for the programme number (PR) to ON to unscramble a scrambled TV channel. For details, see “Using the DECODER (EXT-2) function” on page 30.

Connecting headphones

Connect the headphones with a stereo mini-jack (3.5mm diameter) to the headphone jack at the TV front panel.

- When you connect the headphones, the TV speakers go off.

Video or sound signal output from the EXT-2 terminal

You can change over the output of the video/sound signal from the EXT-2 terminal. This is useful when you want to dub the video/sound from another device onto the VCR connected to the EXT-2 terminal. For details on how to do this, see “DUBBING” on page 22.


TV output from the EXT-1 terminal


The video/sound signal of a TV channel you are viewing is always output from the EXT-1 terminal.

- Changing over a programme number (PR) also changes over the TV output from the EXT-1 terminal.
- The video/sound signal from an EXT terminal cannot be output.
- Teletext programmes cannot be output.

TV buttons and parts


■ Front panel

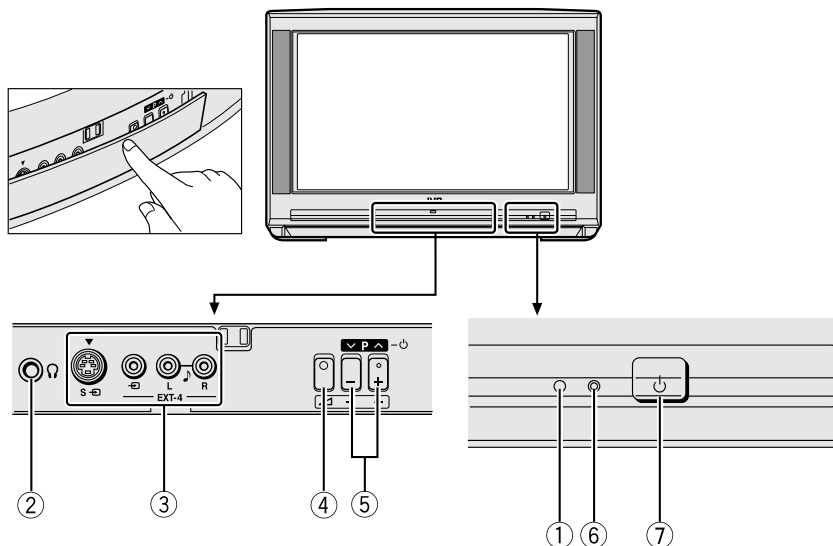

① Remote control sensor	
② Headphone jack (mini jack)	page 31
③ EXT-4 terminal	pages 21 and 31
④  (Volume) button	page 10

⑤ P ∇/Δ buttons / $-/+$ buttons	page 10
⑥ Power lamp	pages 5 and 8
⑦ Main power button	pages 5 and 8

■ Rear Panel

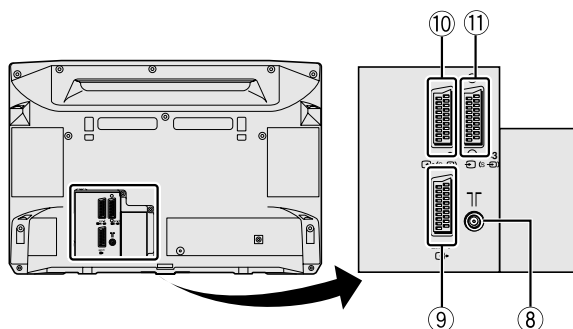

⑧ Aerial socket	page 4
⑨ EXT-1 terminal	pages 4, 21 and 31

⑩ EXT-2 terminal	pages 4, 7, 21 and 31
⑪ EXT-3 terminal	pages 21 and 31

Troubleshooting

If a problem arises while you are using the TV, please read this troubleshooting guide carefully before you ask to have the TV repaired. You may be able to fix it easily by yourself. For example, if the mains plug is disconnected from the mains outlet, or the TV aerial has problems, you may think there is a problem with the TV itself.

Important:

- This troubleshooting guide only covers problems whose causes are not easy to decide. If you have a question when you are operating a function, read the page(s) for that function carefully, not this troubleshooting guide.
- If you follow the advice in this troubleshooting guide without any success, unplug the mains plug and ask for your TV to be repaired. Do not attempt to repair the TV by yourself or to remove the rear cover of the TV.

If you cannot turn on the TV

- Is the mains plug connected to the mains outlet?
- Is the power lamp lit? If not, press the main power button.

No picture or no sound

- Have you chosen a TV channel with very poor reception? If so, the BLUE BACK function will be activated: the entire screen becomes blue, and the sound is muted. If you still want to view the TV channel, follow the description "BLUE BACK" on page 23 to try to change the BLUE BACK function setting to OFF.
- Have you connected headphones to the TV?
Connecting headphones to the TV turns off the TV speakers.

Poor picture

- If noise (snow) totally blocks out the picture, there may be a problem with the aerial or aerial cable. Check the following to try to solve the problem:
 - Have the TV and aerial been connected properly?
 - Has the aerial cable been damaged?
 - Is the aerial pointing in the right direction?
 - Is the aerial itself faulty?
- If the TV or aerial suffers interference from other equipment, stripes or noise may appear in the picture. Move any equipment such as an amplifier, personal computer, or a hair drier, that can cause interference away from your TV. Or try moving the TV. If the aerial suffers interference from a radio tower or high-voltage wire, please contact your local dealer.
- If the TV suffers interference from signals reflecting from mountains or buildings, double-pictures (ghosting) will occur. Try to change the aerial's direction or replace it with one with better directionality.
- Are your COLOUR SYSTEM settings correct? Follow the description "COLOUR SYSTEM" on page 18 to try a way to solve the trouble.
- Have the COLOUR and BRIGHT settings been adjusted properly? Follow the description "Picture adjustment" on page 17 to try to adjust them properly.
- Videotaping teletext is not recommended because it may not record correctly.
- When a white and bright still image (such as a white dress) is displayed on the screen, the white part may look as if it is coloured. This is unavoidable due to the nature of the picture tube itself, and not due to a TV failure. When the picture disappears from the screen, the unnatural colours will also disappear.
- When viewing images from commercially available video software products, or videos from videotapes which have been recorded improperly, the top of the image may be distorted. This is due to the condition of the video signal, and not because of malfunction.

 
Poor sound

- Have you adjusted BASS or TREBLE properly? If not, follow the description "Sound adjustment" on page 20.
- When TV channel reception is poor, it can be hard to hear the stereo or bilingual sound. In this case, follow the description "STEREO / I•II" on page 20 to hear the sound more easily by changing it to a mono sound.

If the TV does not respond to the remote control.

- Have the batteries of the remote control worn out? Follow the description "Putting batteries into the remote control" on page 4 and replace them with new batteries.
- Have you attempted to use the remote control from the sides or rear of the TV or from more than seven metres away from the TV? Use the remote control in the front of your TV or from less than seven metres away.
- When you are viewing a teletext programme, you cannot operate the menus. Press the **TV** button to return to the ordinary TV programme, and then try operating the menus.
- If the TV will not respond suddenly, press the main power button on the TV and turn off the main power. Press the main power button again to turn on the TV. If the TV returns to a normal state, it is not a failure.

Other issues

- When the SLEEP TIMER function operates, the TV is automatically turned off. If the TV is turned off suddenly, try to press the  (standby) button to turn on the TV once again. If the TV goes back to normal, there is no problem.
- When a wide screen signal (WSS) is included in the broadcast signal or the signal from an external device, or when the TV is receiving a control signal from an external device, the ZOOM mode will change automatically. When you want to return to the previous ZOOM mode, press the **ZOOM** button to choose the ZOOM mode again.
- If you bring a magnetised device such as a speaker near to your TV, the picture may be warped or unnatural colors may appear at the corners of the screen. In this case, keep the device from your TV. If speakers cause this to happen, use magnetic-shielded speakers instead.
- It takes a short time from the time an operation such as changing channels is performed until an image is displayed. This is not a malfunction. This is the time it takes for the image to stabilize before it can be displayed.
- The TV may make a crackling sound due to a sudden change in temperature. The picture or sound may be normal. If you hear crackling sounds frequently while you are viewing the TV, there may be other causes. As a precaution, ask your service technician to inspect it.
- Touching the screen may cause you to feel a slight electric shock due to its static electricity. This is unavoidable due to the construction of the picture tube. It is not a problem with the TV. You can rest assured that this static discharge is not harmful.

Specifications

Item \ Model	AV28CT1EK* (UK model)	AV28CT1EI* (Ireland model)
Broadcasting systems	CCIR I	
Colour systems	PAL • The EXT terminals also support the NTSC 3.58/4.43 MHz system.	
Channels and frequencies	E21-E69	IR A-J, E2-E12, E21-E69, S1-S41, X, Y, Z, Z+1, Z+2, ITALY A-H, ITALY H+1, ITALY H+2
Sound-multiplex systems	NICAM (I) system	
Teletext systems	FLOF (Fastext), WST (World Standard Text)	
Power requirements	220 - 240 V AC, 50 Hz	
Power consumption	Maximum: 156 W, Average: 122 W, Standby: 0.8 W	
Picture tube size	Viewable area 66 cm (measured diagonally)	
Audio output	Rated Power output: 5 W + 5 W	
Speakers	(10 cm × 3 cm) oval × 2	
EXT-1 terminal	Euroconnector (21-pin, SCART) • Video input, Audio L/R inputs and RGB inputs are available. • TV broadcast outputs (Video and Audio L/R) are available.	
EXT-2 terminal	Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input and Audio L/R inputs are available. • Video and Audio L/R outputs are available. • T-V LINK functions are available.	
EXT-3 terminal	Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input and Audio L/R inputs are available.	
EXT-4 terminal	RCA connectors × 3 S-VIDEO connector × 1 • Video input, S-VIDEO (Y/C) input and Audio L/R inputs are available.	
Headphone jack	Stereo mini-jack (3.5 mm in diameter)	
Dimensions (W × H × D)	725 mm × 480 mm × 496 mm	
Weight	33.8 kg	
Accessories	Remote control unit × 1 (RM-C55 (Grey) or RM-C51 (Black) is supplied.) AAA/R03 dry cell battery × 2	

* A basic model number. The actual model number may have characters added (such as "S" denoting silver) indicating the colour of the TV set.

We may change the design and specifications without notice.

Pictures displayed on the screen using this TV's ZOOM functions should not be shown for any commercial or demonstration purpose in public places (cafes, hotels, etc.) without the consent of the owners of copyright of the original picture sources, as this would be an infringement of copyright.